

380

Claw coupler (2 pcs.)

430

Fastening to the wall

with M12 bolts (9 pcs.

ø90

MPTYING, OPERATION AND MAINTENANCE INSTRUCTIONS FOR THE SEPARATOR (INDOOR NOTALLATION MODEL):

290

with pop rivets at the installation site.

The movable mounting collar is

installed to the desired location

In case the separator can't be installed in to the ground outside the building (i.e. renevation sites or premises where is no free land area available), the separator can be installed indoors. Separators equipped with two suction pipes are drained either the whole storage volume at a time from the bottom the tank (grease separators) or one pipe drains the oil layer (hazardous waste) from the oil storage space and the other pipe drains the whole storage volume from the bottom the tank (oil separators).

TUPLAIMUBOX quick coupling box should be installed to a place where it is easily accessible for the emptying truck.

The separator should be installed in an air—conditioned room where it can be maintained through a manhole. For successful maintenance it is recommended to place the separator close to a hot water hose connection point, which can be used to clean the dirt from separator walls and bottom. Removing dried and solidified grease requires special attention. Cleaning operation through a manhole must be done at least once a year. The room where the separator is installed must be sewered. Indoor installation requires a gas tight cover.

Votes: _

This drawing and the technical information included in the drawing are property of Wavin-Labko. All the national regulations concerning this product have to be checked before purchase of the product. Installation have to be done according to installation manual.

Approved by customer:

201_



Labko

Tel. +358-20-1285 200 Fax +358-20-1285 280 www.wavin-labko.fi

